


Technical Detail

Fit for glass size; 6 - 10 mm thickness
No glass cut out requested

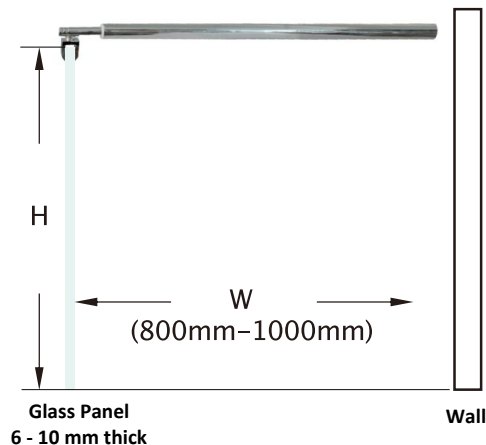

Tools required to install;

Spirit Level, Measuring tape,
Power drill, Allen key set,
Philips screwdriver,
Plastic wedges and
8 - 10 mm drill bit for stone

**Please see safety instructions on
power drill before starting assembly**



Glass to wall shower bracing bar

Installation Instruction

MODEL	L	C - C	Glass thickness
87SBB19140	800 - 1000	787 - 987	6 - 10mm
87SBB19195	800 - 1000	787 - 987	6 - 10mm

Finishes
140 = CH (Chrome finished)
195 = BN (Brushed finished)

Step 1; Measure the glass panel high (H) and the distance (W) from the wall. Drill the screw hole for the shower bracing bar on the wall.

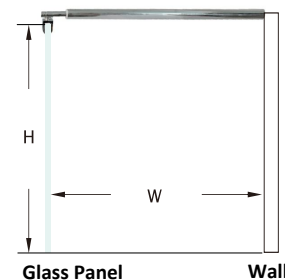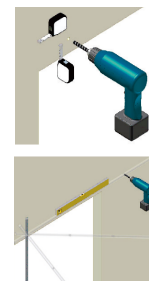

Step 2; Set up the base of the shower bracing bar on the top of the glass panel and fixed other side of the shower bracing bar to the wall.



Step 3; Adjust the shower bracing bar and let the glass panel to the right distance (W) from the wall.

